Imp Instruction Start the Ups and Wait for 1 minute. Let Ups be stable before starting CPU.

Imp Instruction Shutdown system properly then switch off UPS, Do not switch off Main white switches.